

Subscriber Terminals

# NTX-1, NTX-1F

User Manual

Firmware version 1.0.0

IP address: 192.168.1.1

Username: user

Password: user

## Contents

<b>1</b>	<b>Introduction .....</b>	<b>3</b>
<b>2</b>	<b>Product Description .....</b>	<b>4</b>
2.1	Purpose.....	4
2.2	Overview.....	4
2.3	Technical Specifications.....	5
<b>3</b>	<b>Design.....</b>	<b>7</b>
3.1	NTX-1 Rear Panel.....	7
3.2	NTX-1F Rear Panel.....	7
3.3	NTX-1, NTX-1F Light Indication .....	8
3.4	Reboot/Reset to Factory Settings .....	10
3.5	Delivery Package .....	10
<b>4</b>	<b>Device Architecture .....</b>	<b>11</b>
<b>5</b>	<b>Configuring the Device via Web Interface. User Access .....</b>	<b>12</b>
5.1	'Status' Menu. Device Information.....	13
5.1.1	'Device Status' Submenu. General Information on the Device .....	13
5.2	'Admin' Menu .....	14
5.2.1	'Commit/Reboot' Submenu. Commit Changes and Reboot the Device .....	14
5.2.2	'Backup/Restore' Submenu. Backup and Restore Settings.....	14
5.3	'Password' Submenu. Setting up Access Control.....	15
5.3.1	'Time Zone' Submenu. System Time Configuration .....	15
5.3.2	'Logout' Submenu. User Change.....	16
<b>6</b>	<b>Revisions.....</b>	<b>17</b>

## 1 Introduction

The XGS-PON network belongs to one of the varieties of passive optical networks PON. This is one of the most modern and effective solutions to the problems of the 'last mile', which allows significant savings on cable infrastructure and provides information transfer speeds of up to 10 Gbps in the downlink direction and 10 Gbps in the uplink direction. Using solutions based on XGS-PON technology in access networks makes it possible to provide the end user with an access to a set of services based on the IP protocol along with traditional services.

The main advantage of XGS-PON is the use of a single station terminal (OLT) for multiple subscriber devices (ONT). OLT is a converter of Gigabit Ethernet and XGS-PON interfaces, which serves to connect the PON network with higher-level data transmission networks. ONT is designed to connect customers' terminal equipment to broadband access services. It can be used in residential complexes and business centers.

The line of ONT NTX equipment manufactured by ELTEX is represented by terminals:

- NTX-1 with two UNI (*user network interfaces*) Ethernet interfaces: RJ-45 10/100/1000BASE-T port, RJ-45 100/1000/2.5G/5G/10GBASE-T port; and one XGS-PON port;
- NTX-1F with two UNI (*user network interfaces*) Ethernet interfaces: RJ-45 10/100/1000BASE-T port, 10GbE (SFP+) port; and one XGS-PON port.

This user manual describes purpose, main technical characteristics, rules for configuring, monitoring, and firmware updating of optical terminals NTX-1, NTX-1F.

### Notes and warnings

 Notes contain important information, tips or recommendations on device operation and setup.

 Warnings inform users about hazardous conditions which may cause injuries or device damage and may lead to the device malfunctioning or data loss.

## 2 Product Description

### 2.1 Purpose

The NTX-1, NTX-1F XGS-PON ONT (10-Gigabit-capable Symmetric Passive Optical Network) devices are high-performance subscriber terminals designed to communicate with higher-level equipment of passive optical networks and provide broadband access services to the end user. Communication with XGS-PON networks is implemented through the XGS-PON interface, interfaces 10/100/1000BASE-T, 100/1000/2.5G/ 5G/10GBASE-T (for NTX-1) or 10 GbE Ethernet interface (SFP+) (for NTX-1F) are used to connect client terminal equipment.

The advantage of XGS-PON technology is the optimal use of bandwidth. This technology is the next step to provide new high-speed Internet applications at home and in the office. Designed to deploy a network inside a home or building, these ONT devices provide a reliable, high-bandwidth long-distance connection for users living and working in remote apartment buildings and business centers.

The NTX-1 and NTX-1F devices have the following set of interfaces:

Table 1. Interface configuration

Model name	WAN	LAN
<b>NTX-1</b>	1 × XGS-PON	1 × 100/1000/2.5G/5G/10GBASE-T 1 × 10/100/1000BASE-T
<b>NTX-1F</b>	1 × XGS-PON	1 × Ethernet 10GbE (SFP+) 1 × 10/100/1000BASE-T

### 2.2 Overview

#### The device has the following interfaces:

- 1 XGS-PON port for connection to the provider's network;
- 1 RJ-45 10/100/1000BASE-T port for network devices connection;
- 1 RJ-45 100/1000/2.5G/5G/10GBASE-T port (for NTX-1) or 1 Ethernet port 10GbE (SFP+) (for NTX-1F) for network devices connection.

The terminal is powered via 220 V/12 V external adapter.

#### The device supports the following functions:

- Network functions:
  - operation in 'bridge' mode;
  - IGMP snooping support.
- firmware update via the web interface, OMCI;
- remote monitoring, configuration and setup via OMCI.

Figure 1 below shows use case of NTX-1, NTX-1F.

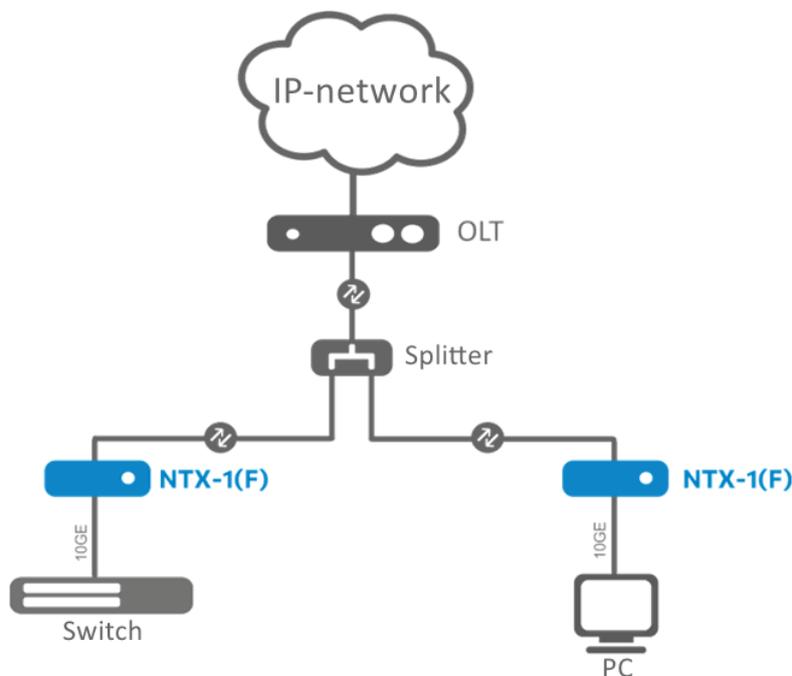


Fig. 1. NTX-1, NTX-1F Use Case

### 2.3 Technical Specifications

Table 2 lists main specifications of the terminal.

Table 2. Main Specifications

#### Ethernet LAN interfaces parameters

Device	NTX-1	NTX-1F
No. of interfaces	2	2
Electrical port	1 × 10/100/1000BASE-T (RJ-45) 1 × 100/1000/2.5G/5G/10GBASE-T (RJ-45)	1 × 10/100/1000BASE-T (RJ-45) 1 × Ethernet 10GbE (SFP+)
Data transfer rate	Autonegotiation, 10/100/1000/10000 Mbps, duplex/half duplex	Autonegotiation, 1000/10000 Mbps, duplex/half duplex
Supported standards	IEEE 802.3i 10BASE-T Ethernet IEEE 802.3u 100BASE-TX Fast Ethernet IEEE 802.3ab 1000BASE-T Gigabit Ethernet IEEE 802.3bz 2.5G/5GBASE-T Gigabit Ethernet IEEE 802.3ae 10GBASE-T 10Gigabit Ethernet IEEE 802.3x Flow Control IEEE 802.3 NWay Autonegotiation	IEEE 802.3i 10BASE-T Ethernet IEEE 802.3u 100BASE-TX Fast Ethernet IEEE 802.3ab 1000BASE-T Gigabit Ethernet IEEE 802.3ae 10GBASE-T 10Gigabit Ethernet IEEE 802.3x Flow Control IEEE 802.3 NWay Autonegotiation IEEE 802.3z Fiber Gigabit Ethernet

#### PON Interface Parameters

No. of interfaces	1
Supported standards	ITU-T G.9807.1 XGS-PON

**Control**

Local control	web interface
Remote control	OMCI
Firmware version updating	OMCI, HTTP
Access restriction	by password

**General parameters**

Power supply	12 V, 2 A power adapter
Power consumption	up to 10 W
Operating temperature	from +5 to +40 °C
Relative humidity	up to 80 %
Dimensions (W × H × D)	234 × 34 × 133 mm (NTX-1) 234 × 36 × 135 mm (NTX-1F)
Lifetime	at least 5 years

### 3 Design

#### 3.1 NTX-1 Rear Panel

The subscriber terminal is enclosed in a plastic case with dimensions of 234 × 34 × 133 mm. The rear panel of NTX-1 is shown in Figure 2 below.

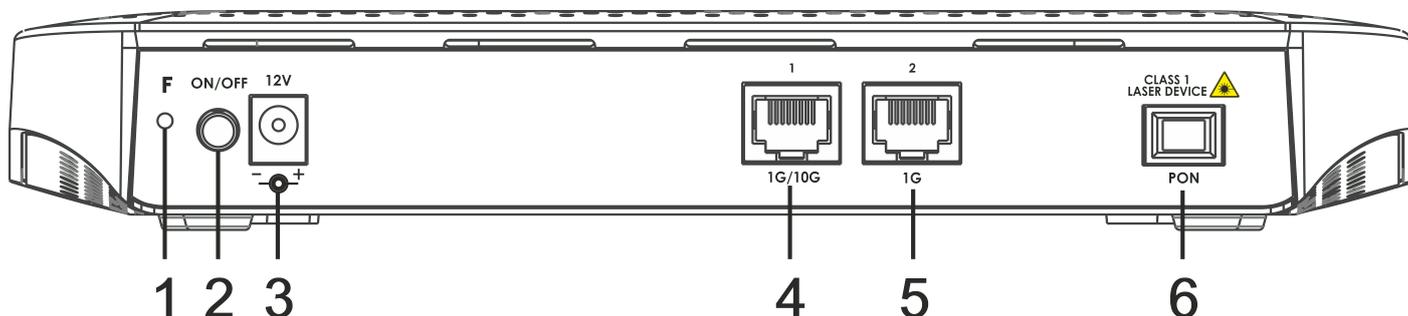


Fig. 2. NTX-1 Rear Panel Layout

Connectors and controls located on NTX-1 rear panel are listed in Table 3.

Table 3. Description of connectors and controls of NTX-1 rear panel

No.	Rear Panel Element	Description
1	<i>F</i>	Reset to default settings
2	<i>ON/OFF</i>	ON/OFF switch
3	<i>12V</i>	Power adapter connector
4	<i>1G/10G</i>	RJ-45 100/1000/2.5G/5G/10GBASE-T port for network devices connection
5	<i>1G</i>	RJ-45 10/100/1000BASE-T port for network devices connection
6	<i>PON</i>	SC/APC connector (socket) XGS-PON optical interface GPON

#### 3.2 NTX-1F Rear Panel

The subscriber terminal is enclosed in a plastic case with dimensions of 234 × 36 × 135 mm. The rear panel of NTX-1F is shown in Figure 3 below.

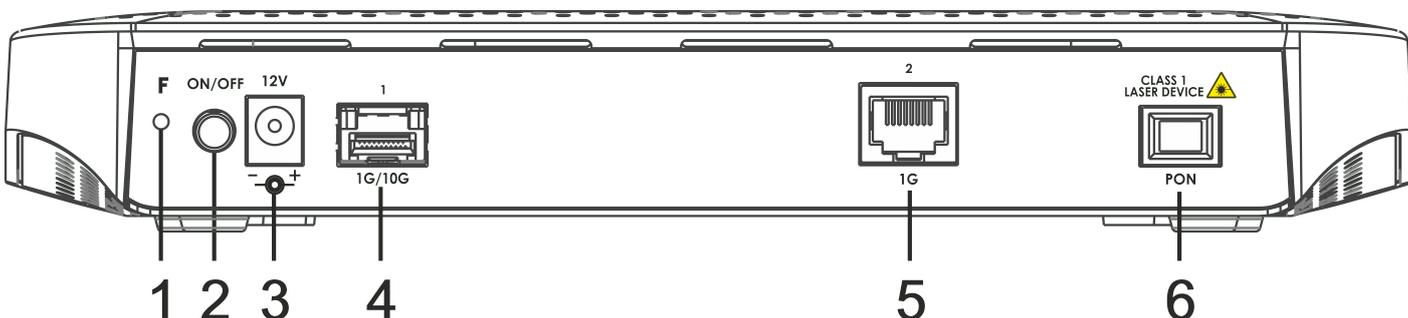


Fig. 3. NTX-1F Rear Panel Layout

Connectors and controls located on NTX-1F rear panel are listed in Table 4.

Table 4. Description of connectors and controls of NTX-1F rear panel

No.	Rear Panel Element	Description
1	<b>F</b>	Reset to default settings
2	<b>ON/OFF</b>	ON/OFF switch
3	<b>12V</b>	Power adapter connector
4	<b>1G/10G</b>	10 GbE Ethernet port (SFP+) for network devices connection
5	<b>1G</b>	RJ-45 10/100/1000BASE-T port for network devices connection
6	<b>PON</b>	SC/APC connector (socket) XGS-PON optical interface GPON

### 3.3 NTX-1, NTX-1F Light Indication

The front panel of NTX-1, NTX-1F is shown in Figure 4 below.

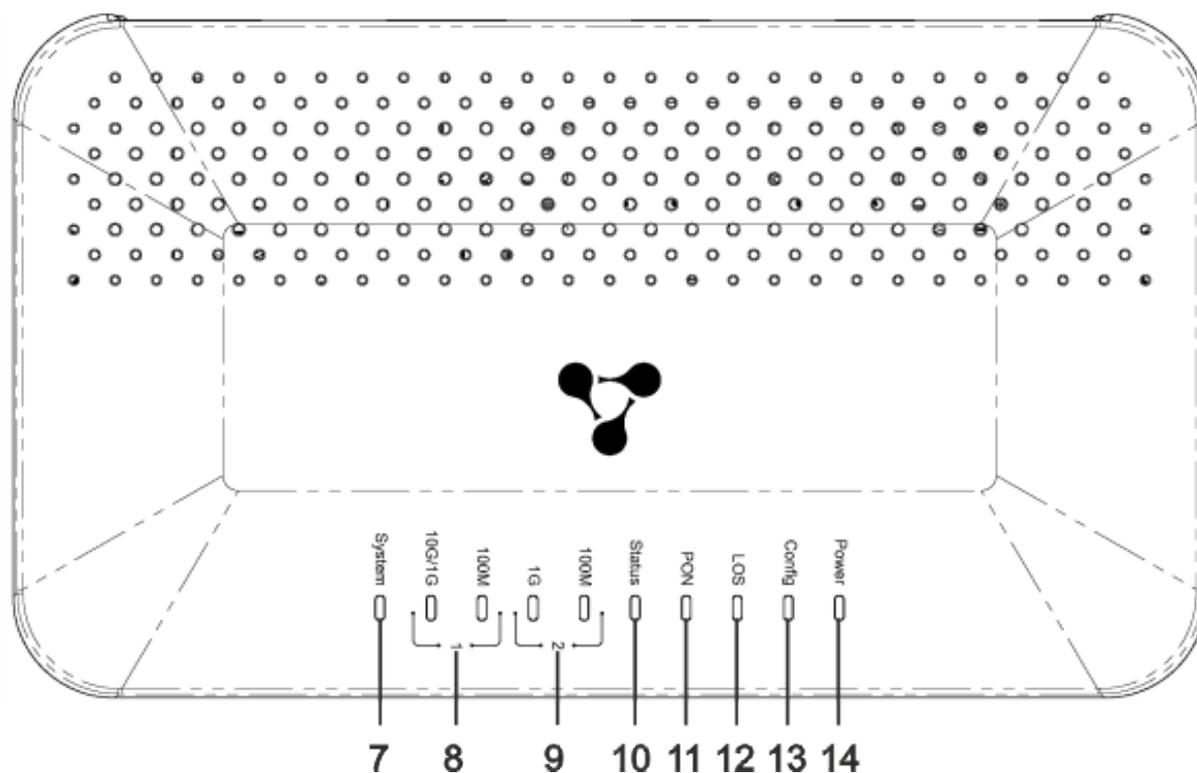


Fig. 4. NTX-1, NTX-1F Front Panel Layout

LED indicators located on NTX-1, NTX-1F front panel represent the current state of the device.

Table 5 below lists possible states of the LEDs.

Table 5. Description of NTX-1, NTX-1F front panel indicators

No.	Front Panel Element	Indicator State	Description
7	<b>System</b>	Off	The Linux system did not start
		On	The Linux system started successfully
		Flashing	Updating via OMCI
8	<b>LAN 1 10G/1G indicator</b>	Off	Cable is not connected
		Yellow	1/10 Gbps connection has been established
		Flashing yellow	Data transfer is in progress
	<b>LAN 1 100M indicator</b>	Off	Cable is not connected
		Green	100 Mbps connection has been established
		Flashing green	Data transfer is in progress
9	<b>LAN 2 1G indicator</b>	Off	Cable is not connected
		Yellow	1 Gbps connection has been established
		Flashing green	Data transfer is in progress
	<b>LAN 2 100M indicator</b>	Off	Cable is not connected
		Green	100 Mbps connection has been established
		Flashing green	Data transfer is in progress
10	<b>Status</b>	Off	An error occurred during OMCI configuration progress
		Green	The OMCI configuration has completed successfully, the device is in operation
		Flashing green	OMCI configuration obtaining is in progress
11	<b>PON</b>	Off	Optic cable is not connected/laser is disabled on OLT side
		Green	The device is connected and registered on OLT
		Flashing green	Registration on OLT is in progress
12	<b>LOS</b>	Off	Signal from OLT present
		Red	Optic cable is not connected
		Flashing red	Laser is disabled on OLT side
13	<b>Config</b>	Off	Standard configuration is set
		Green	Not standard configuration is set

No.	Front Panel Element	Indicator State	Description
14	<b>Power</b>	Off	The device is unplugged or faulty
		Green	Power on

### 3.4 Reboot/Reset to Factory Settings

To restart the device, press the 'F' button once on the bottom panel of the device. To boot the device with factory settings, press and hold the 'F' button for 5 seconds, then release. The device will reboot. Factory settings: LAN IP address is *192.168.1.1*, subnet mask is *255.255.255.0*. Access is possible from LAN 1 and LAN 2 ports.

### 3.5 Delivery Package

The basic delivery of the NTX-1, NTX-1F device includes:

- Subscriber terminal;
- 220/12 V, 2 A power adapter;
- Installation and initial configuration guide.

## 4 Device Architecture

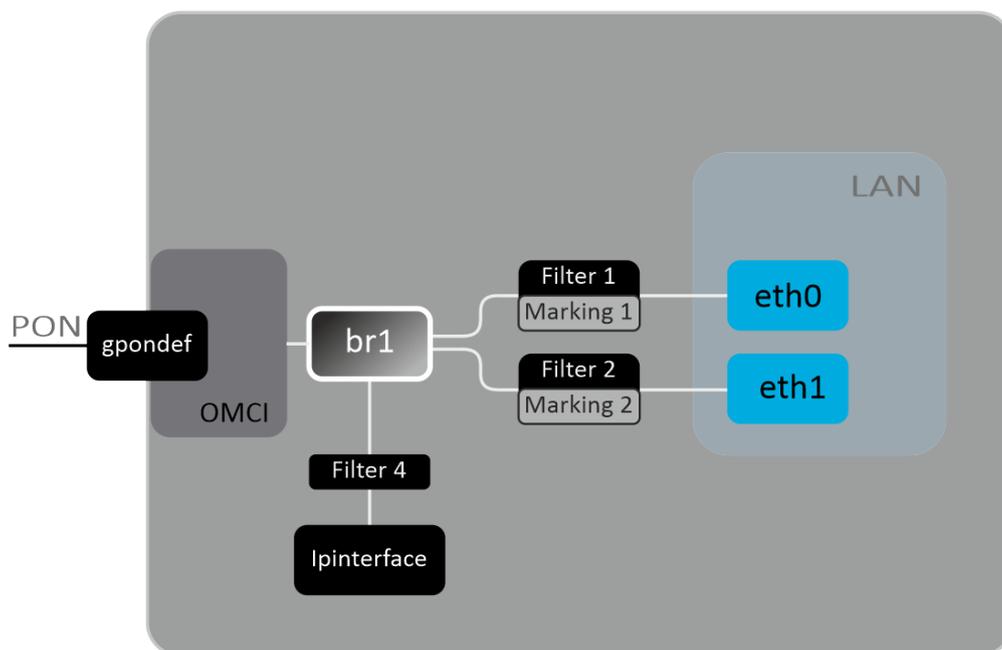


Fig. 5. Logical architecture of the device with factory configuration

### Main elements of the device:

- **Optical transceiver (BOSA)** is designed to convert an optical signal into an electrical one;
- **Processor (PON chip)** is a converter of Ethernet and XGS-PON interfaces.

With the factory (initial) configuration, the following logical blocks are present in the device (Figure 5):

- Br0;
- eth0...1;
- IPInterface1.

**In this case, the br0 block** is designed to combine LAN ports into one group.

**Eth0..1** blocks are Ethernet ports with an RJ-45 connector for connecting PCs, STB or other network devices. They are logically included in the **br0** block.

The **Filter** and **Marking** blocks are designed to include local interfaces in one group (in the **br0** block). They are responsible for traffic rules: **Filter** blocks are responsible for incoming traffic on the interface, **Marking** blocks are responsible for outgoing traffic.

**The IPInterface** block is a logical object on which the IP address for access to the local network is located.

## 5 Configuring the Device via Web Interface. User Access

### Getting started

To configure the device, you need to connect to it via a web browser:

1. Open a web browser (hypertext document viewer), for example, Firefox, Google Chrome.
2. Enter the device IP address in the browser address bar.

✔ Default IP address of the device is *192.168.1.1*; subnet mask is *255.255.255.0*.

When the device is successfully detected, username and password request page will be shown in the browser window:

3. Enter username and password into the corresponding fields.

✔ UserName is **user**, password is **user**.

4. Click the 'Login' button. The starting page of the device's web interface will be displayed in the browser window.

### Web interface elements

General view of the device configuration window is shown below.

System	
Device Name	Modem/Router
Uptime	21 min
Firmware Version	1.0.0.1499
CPU Usage	1%
Memory Usage	9%

LAN Configuration	
IP Address	192.168.1.1
Subnet Mask	255.255.255.0
MAC Address	E828C1F3000F

The user interface window can be divided into 3 parts:

1. The navigation tree for the device settings menu.
2. The main window of selected section settings.
3. User change button.

## 5.1 'Status' Menu. Device Information

### 5.1.1 'Device Status' Submenu. General Information on the Device

The section displays general information on the device, main parameters of LAN and WAN interfaces.

**Device Status**

This page shows the current status and some basic settings of the device.

System	
Device Name	Modem/Router
Uptime	0 min
Firmware Version	1.0.0.1499
CPU Usage	1% <div style="width: 100%; height: 10px; background-color: #ccc; position: relative;"><div style="width: 1%; height: 100%; background-color: #2e8b57;"></div></div>
Memory Usage	9% <div style="width: 100%; height: 10px; background-color: #ccc; position: relative;"><div style="width: 9%; height: 100%; background-color: #2e8b57;"></div></div>

LAN Configuration	
IP Address	192.168.1.1
Subnet Mask	255.255.255.0
MAC Address	E828C1F3000F

The following settings are shown:

#### **System**

- *Device Name*;
- *Uptime* – device operation time since the last reboot;
- *Firmware Version*;
- *CPU Usage, %*;
- *Memory Usage, %*.

#### **LAN Configuration**

- *IP Address*;
- *Subnet Mask*;
- *MAC Address*.


To update the data on the page, click the 'Refresh' button.

## 5.2 'Admin' Menu

This is device management section. In this menu, you can set passwords, time, configurations, and more.

### 5.2.1 'Commit/Reboot' Submenu. Commit Changes and Reboot the Device


Click the 'Commit and Reboot' button to reboot the device or to save changes to the system memory. It may take several minutes to reboot the device.

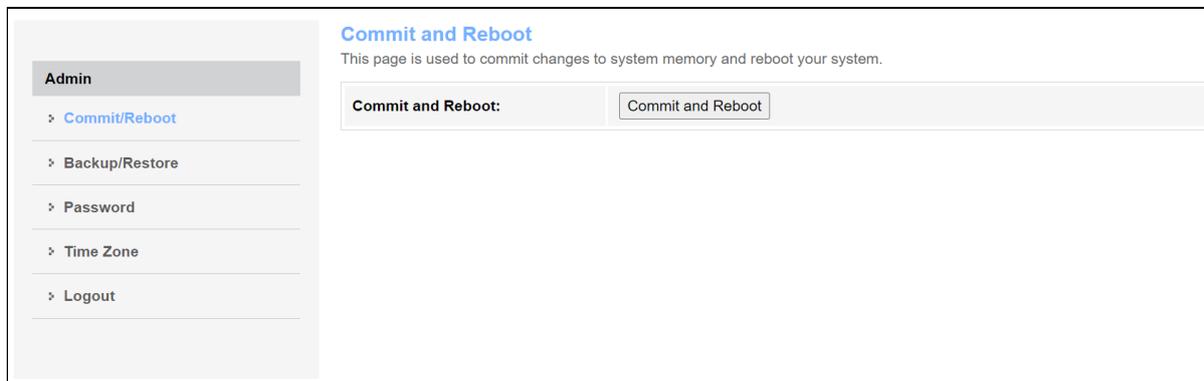

### 5.2.2 'Backup/Restore' Submenu. Backup and Restore Settings

In the section, you can:

- Copy the current settings to a file (*Backup Settings*) by clicking on the 'Backup Settings to File' button;
- Restore settings from a file that was saved earlier (*Update Settings*) by clicking on the 'Restore' button;
- Reset the current settings to factory default settings (*Restore Default*) by clicking on the 'Reset Settings to Default' button.

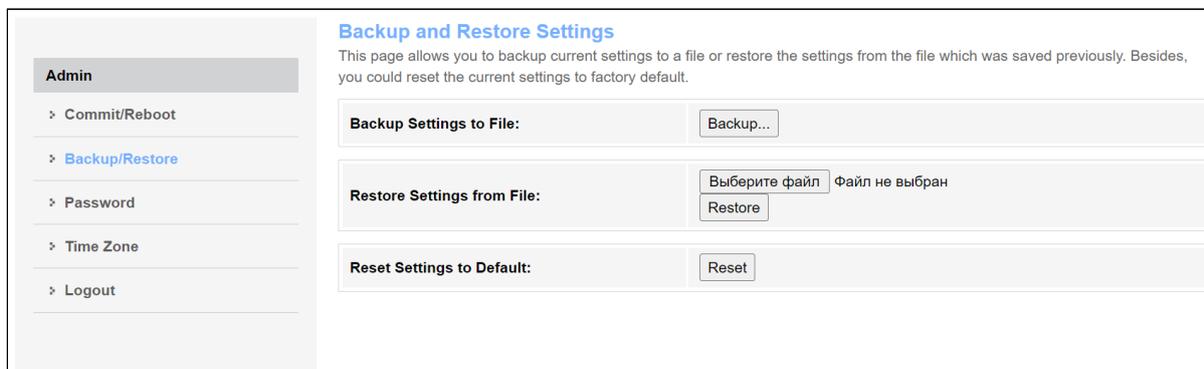

### 5.3 'Password' Submenu. Setting up Access Control

In the section, you may change the password for access to the device.

Admin	
> Commit/Reboot	
> Backup/Restore	
> <b>Password</b>	
> Time Zone	
> Logout	

Password	
This page is used to set the account to access the web server of ADSL Router. Empty user name and password will disable the protection.	
Login User:	user
Old Password:	<input type="text"/>
New Password:	<input type="text"/>
Confirmed Password:	<input type="text"/>
<input type="button" value="Apply Changes"/> <input type="button" value="Reset"/>	

To change the password, enter the current password into the *Old Password* field, then enter the new password into the *New Password* and the *Confirmed Password* fields.

To accept and save changes, click the 'Apply Changes' button, to reset the data, click the 'Reset' button.

#### 5.3.1 'Time Zone' Submenu. System Time Configuration

In the section, you may configure system time. Synchronization with Internet servers of the exact time is also available.

Admin	
> Commit/Reboot	
> Backup/Restore	
> Password	
> <b>Time Zone</b>	
> Logout	

Time Zone Configuration	
You can maintain the system time by synchronizing with a public time server over the Internet.	
Current Time :	Year <input type="text" value="1970"/> Mon <input type="text" value="1"/> Day <input type="text" value="1"/> Hour <input type="text" value="0"/> Min <input type="text" value="2"/> Sec <input type="text" value="55"/>
Time Zone Select :	<input type="text" value="Asia/Taipei (UTC+08:00)"/>
Enable Daylight Saving Time	<input checked="" type="checkbox"/>
Enable SNTP Client Update	<input type="checkbox"/>
WAN Interface:	<input type="text" value="Any"/>
SNTP Server 1 :	<input type="text" value="pool.ntp.org"/>
SNTP Server 2 :	<input type="text" value="220.130.158.52"/>
<input type="button" value="Apply Changes"/> <input type="button" value="Refresh"/>	

The following settings are available:

- *Current time*;
- *Time Zone Select*;
- *Enable Daylight Saving Time*;
- *Enable SNTP Client Update* – enable SNTP time synchronization;
- *WAN Interface* – interface via which the time is updated;
- *SNTP Server 1* – preferred time server;
- *SNTP Interval 2* – synchronization interval with the NTP server.

To save changes, click the 'Apply Changes' button, and to update the information, click the 'Refresh' button.

### 5.3.2 'Logout' Submenu. User Change

In the section, you can access the authorization menu and select another account.



## 6 Revisions

<b>Document version</b>	<b>Firmware</b>	<b>Issue date</b>	<b>Revisions</b>
Version 1.0	1.0.0	06.2021	First issue

## TECHNICAL SUPPORT

For technical assistance in issues related to handling Eltex Ltd. equipment, please, address to Service Center of the company: <http://www.eltex-co.com/support/>

You are welcome to visit Eltex official website to get the relevant technical documentation and software.

Official website: <http://www.eltex-co.com/>

Download center: <http://www.eltex-co.com/support/downloads/>